


## CUTTING THE HEADER (C)

Measure the distance Y and cut the header (C) accordingly

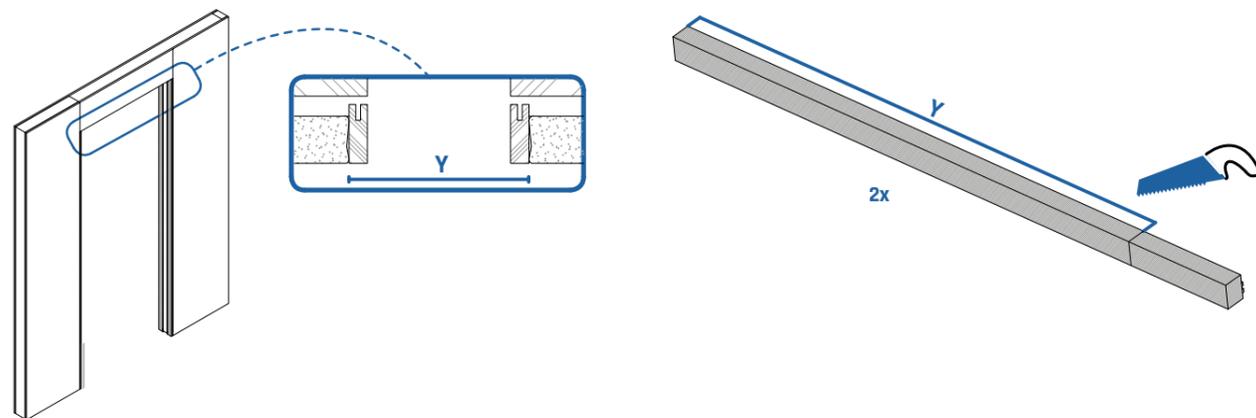

## FITTING THE BRUSHES (C)


For 35 mm Doors - Cut brushes (D) and fit into both headers

For 44 mm Doors - Cut plastic strip (E) and fit into both headers



## FITTING THE HEADER (C)


Apply silicon to the top of the verticals A and to the top of the horizontal (C) and fix header into place.

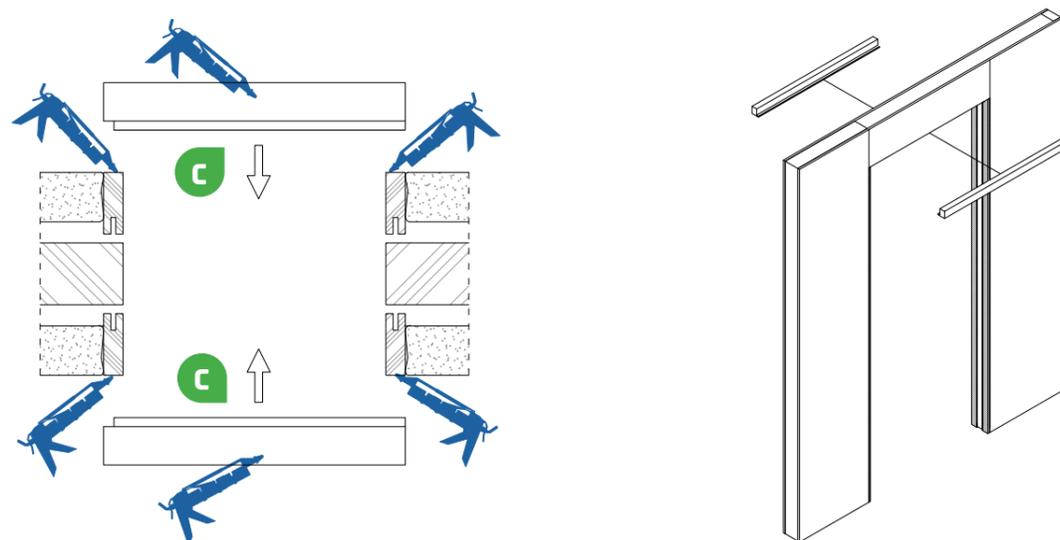

## POCKET DOOR JAMBS

### FITTING INSTRUCTIONS

HERE IS A QUICK AND EASY WAY TO FIT YOUR JAMBS FOR BOTH 35 AND 44 MM THICK DOORS

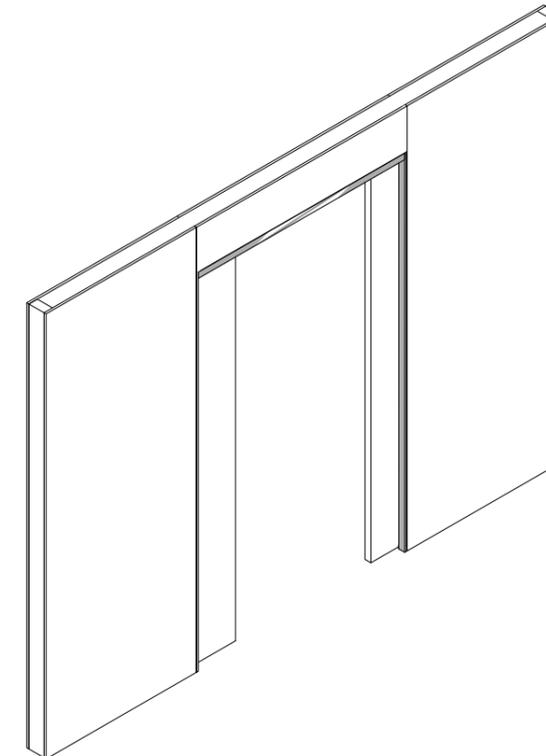

#### EACH KIT CONTAINS:



Verticals with routing for pocket entrance



Horizontal header with routing




4 mm brushes  
Use with 35 mm door only




Plastic strip replacing brushes in header for 44 mm door

## CUTTING THE VERTICAL SECTIONS (A)

**WE RECOMMEND YOU PAINT THE JAMBS BEFORE INSTALLATION TO AVOID GETTING PAINT ON BRUSHES AND PLASTIC STRIP.**

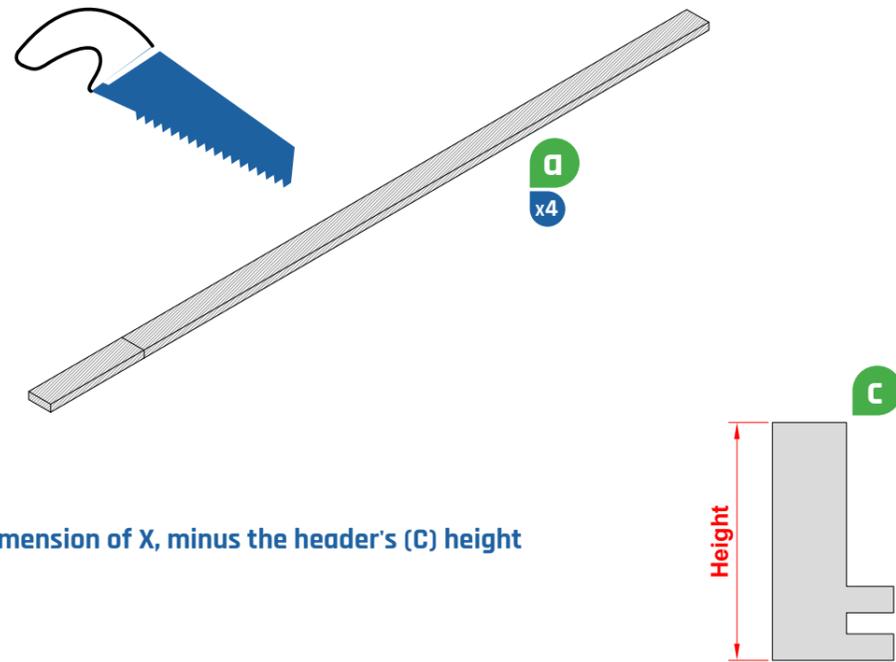


Cut verticals (A) to the dimension of X, minus the header's (C) height

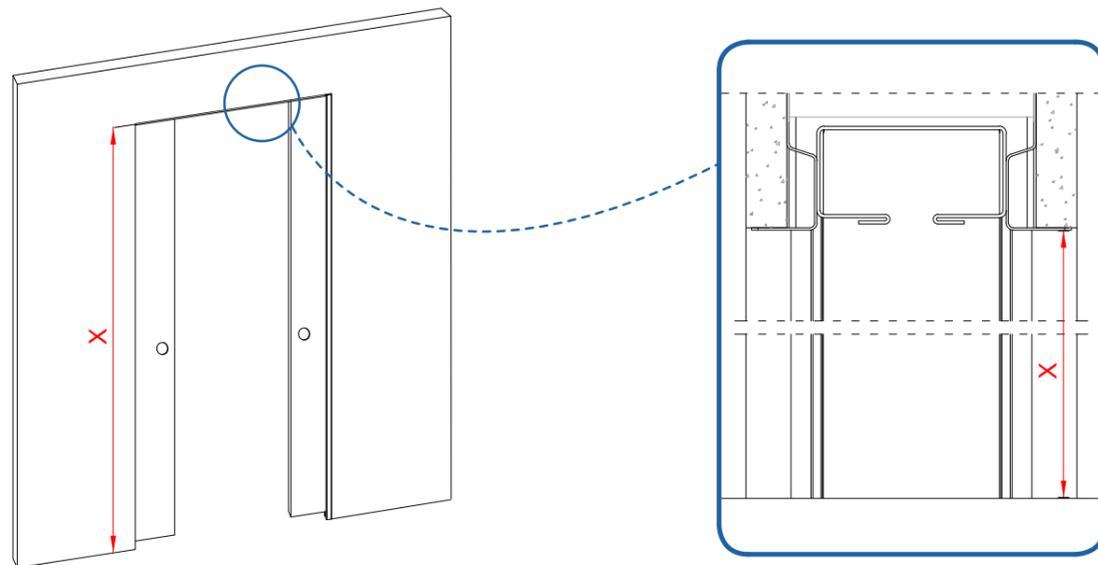

## FITTING THE BRUSHES TO VERTICAL (A)

The brushes are designed for use with 35 mm doors only.

For 35mm doors cut brushes (D) to the lengths of (A) and fit to the jamb pocket entrance verticals (A)

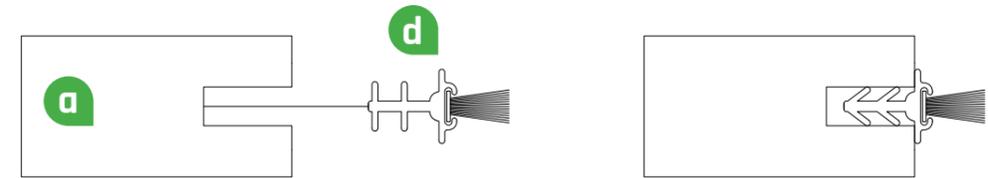

## ATTACHING THE VERTICALS TO (A) THE STEEL FRAME

Use lines of silicon equally spaced along each verticals (A) and attach to the frame.

