




HINGED DOOR INSTALLATION

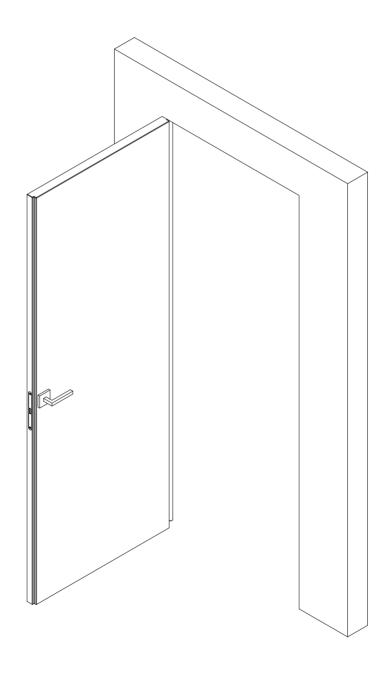

COMPONENTS

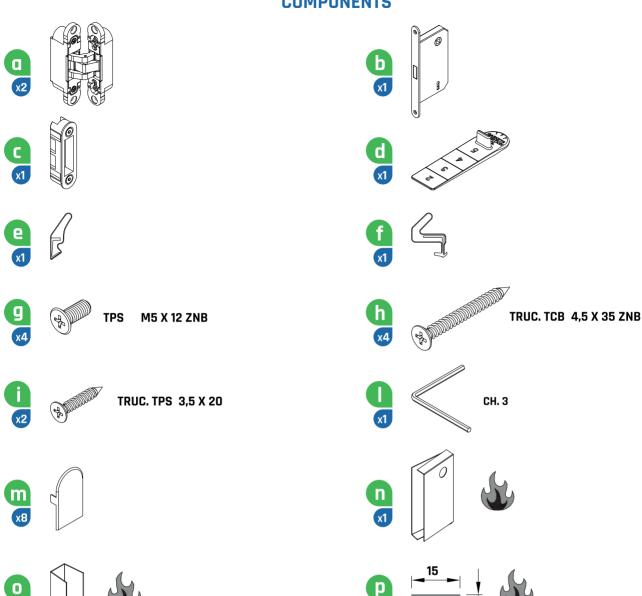

TOOLS REQUIRED

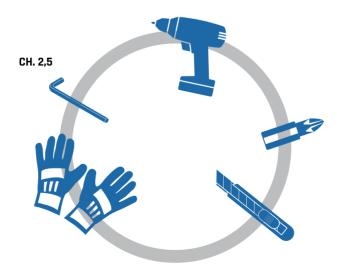



If you follow carefully these instructions for the assembly and installation process your life will be easier! A pair of tressles are very useful when assembling the frames. Some parts may have sharp edges so use gloves and be careful when handling the parts. All Rocket Door frames products are fully inspected and tested before they leave the factory.








PULL PUSH е e "L" + 20

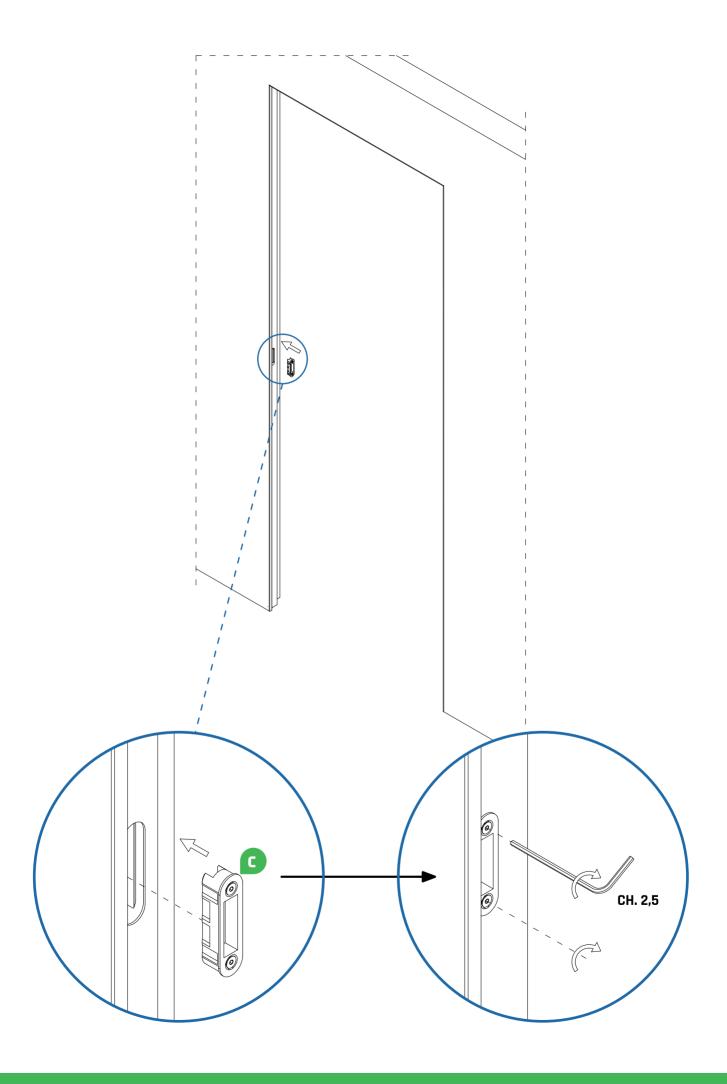


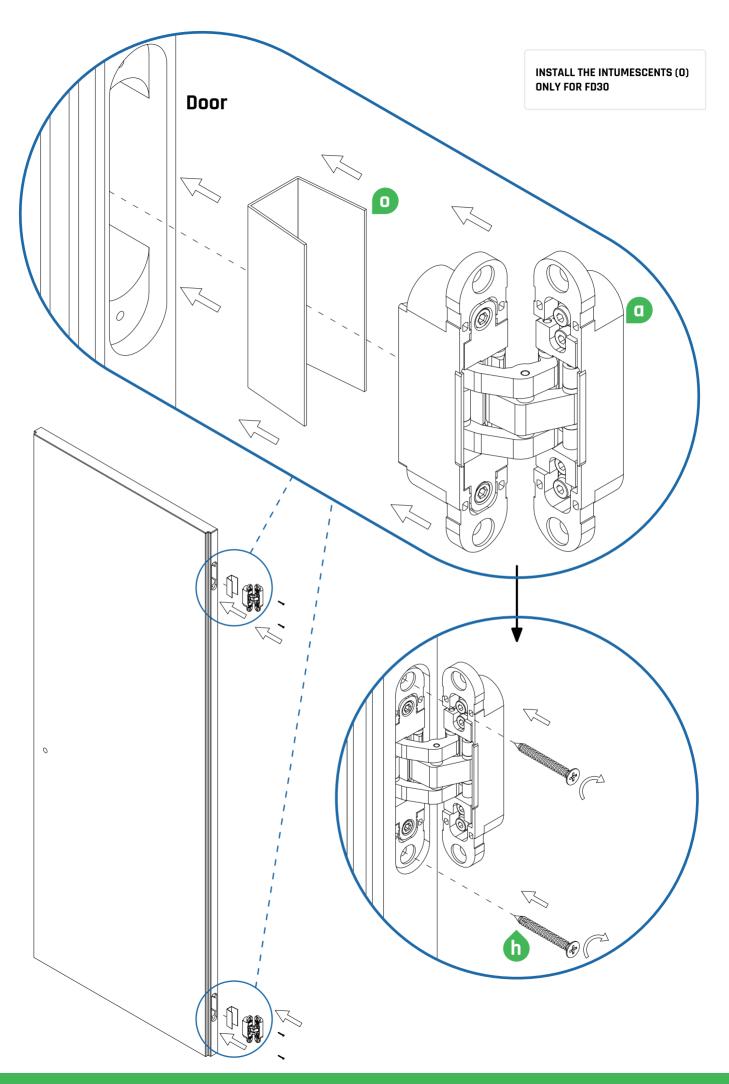


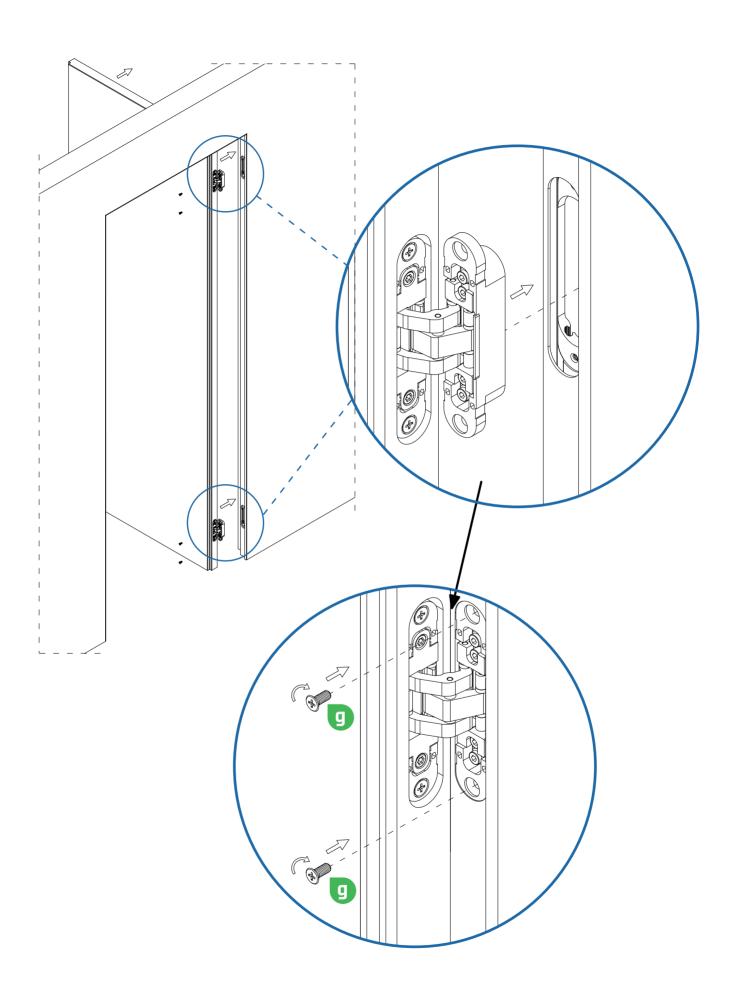

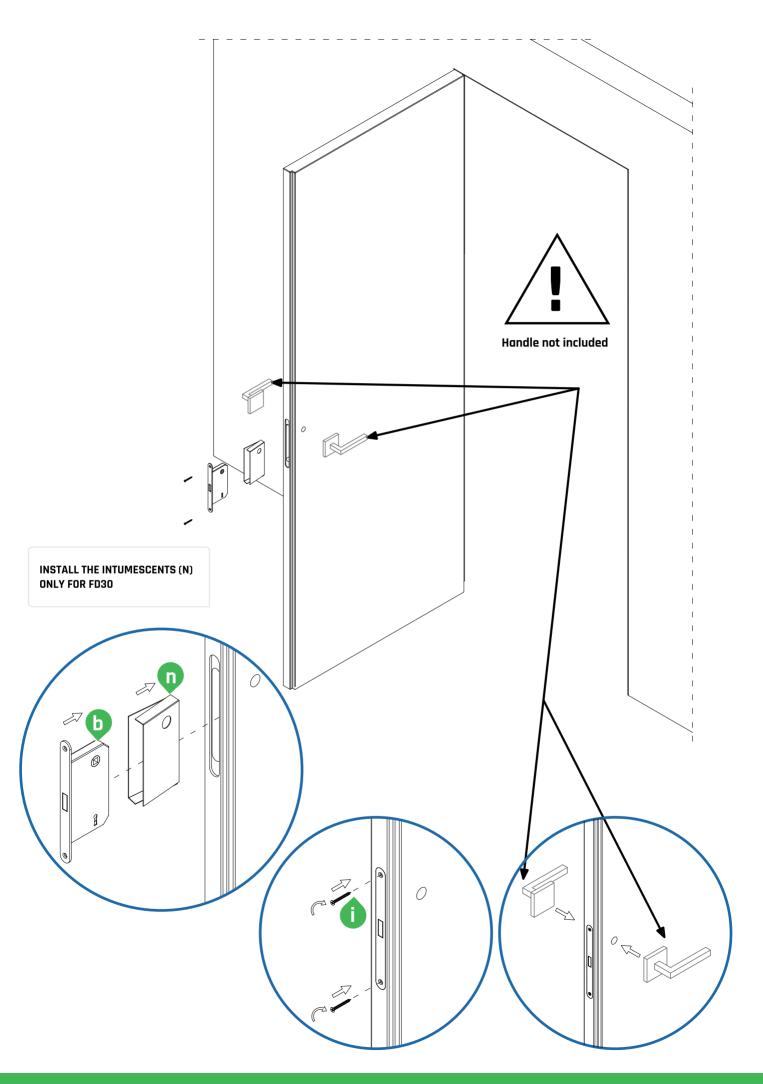

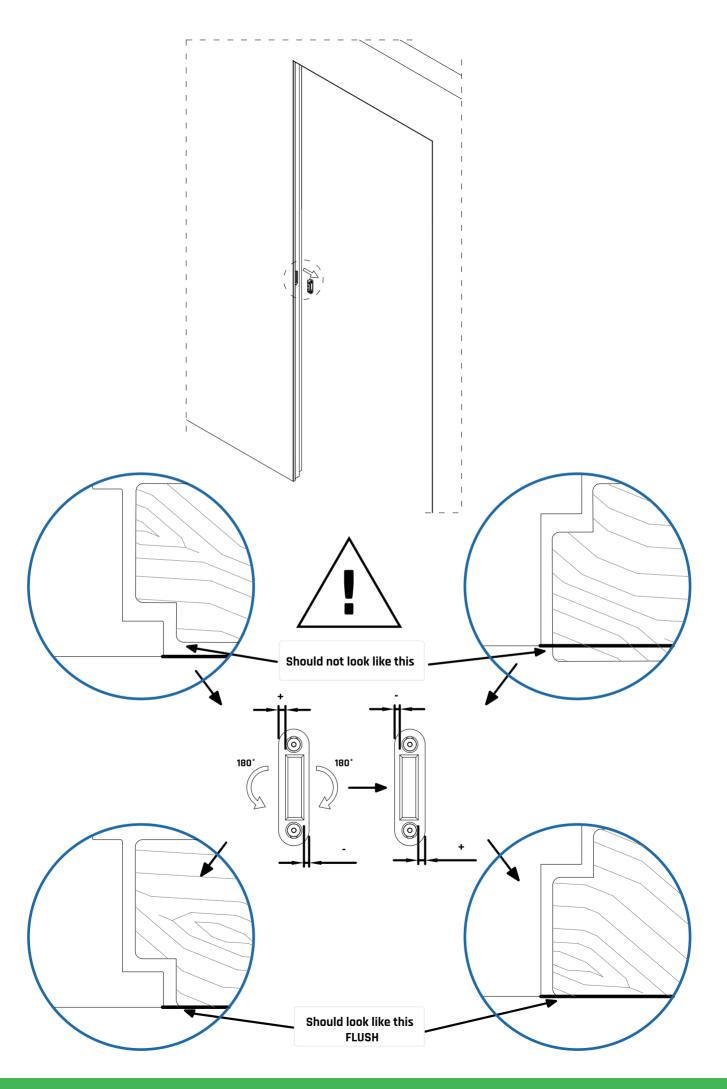


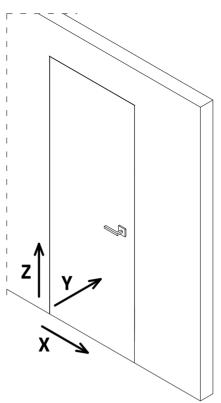


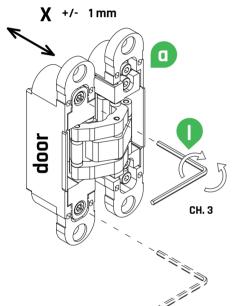

Adjusting the X axis - door panel right/left

Adjusting the Y axis - door panel in/out

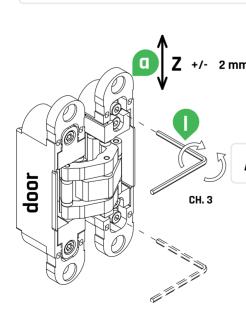


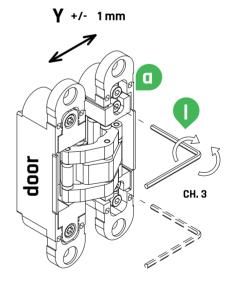


Adjusting the Z axis - door panel up/down





Use wedge (D) to raise the door

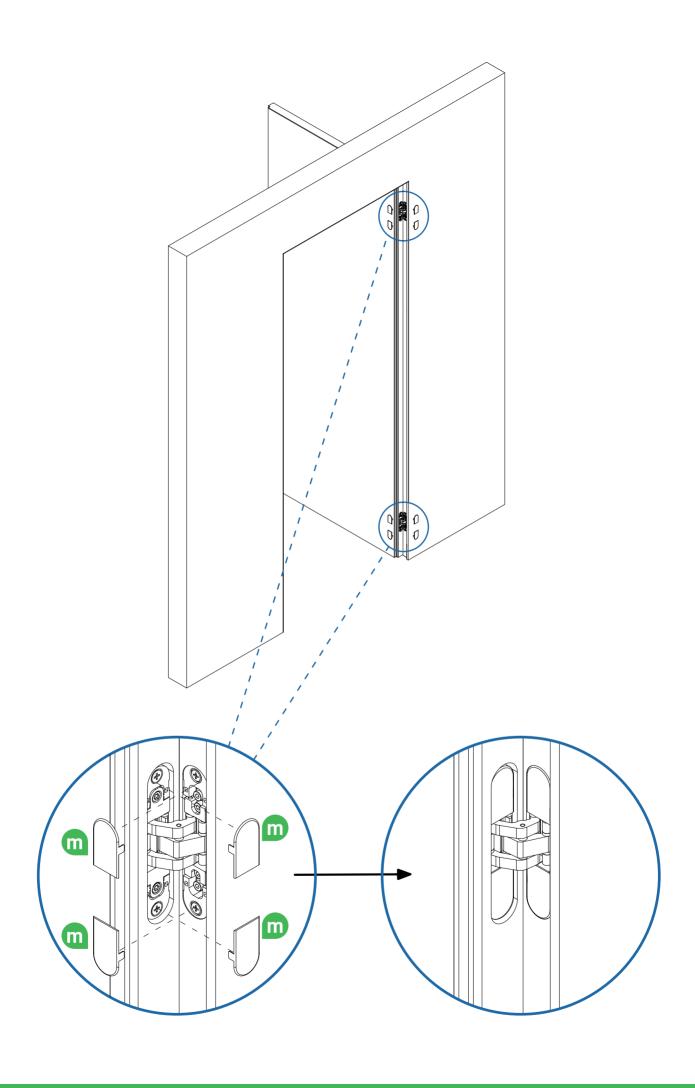

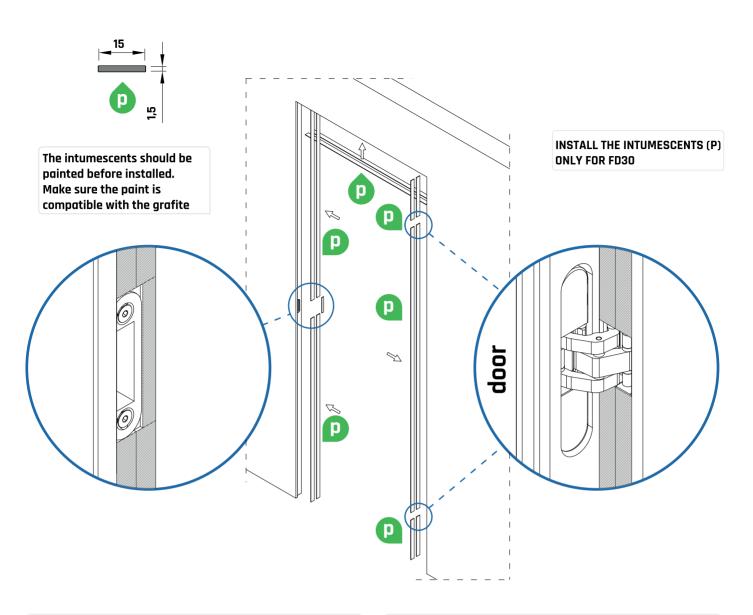

PULL PUSH

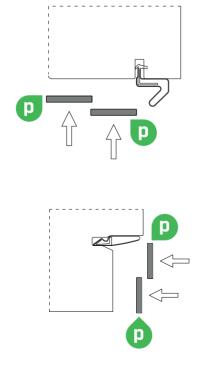

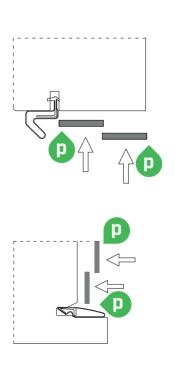



Rocket Door Frames - Unit 14 Priest Court - Springfield Ind Est - Grantham NG31 7FZ T: 03309980617 - info@rocketdoorframes.co.uk - www.rocketdoorframes.co.uk