


LININGS AND ARCHITRAVES

WE DO NOT SUPPLY ARCHITRAVES AS THE CHOICE IS AN INDIVIDUAL ONE


HERE IS A QUICK AND EASY SOLUTION

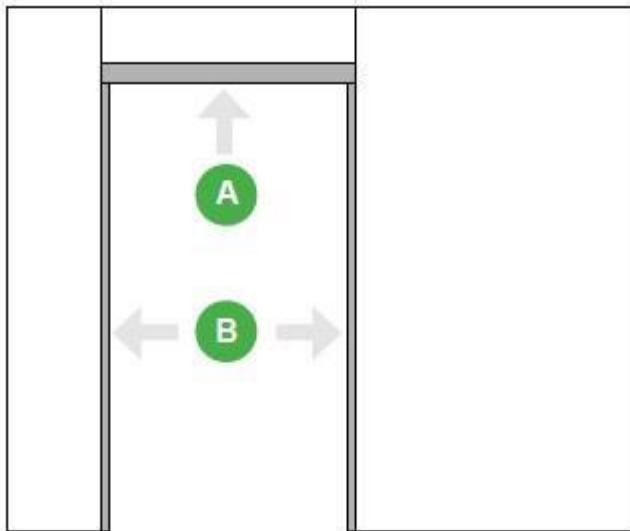

Install part A first using good quality silicon or drill and screw if preferred.










Measure the distance from finished floor level to the underside of A and cut B accordingly.





Secure to the frame with good quality silicon or drill and screw if preferred.


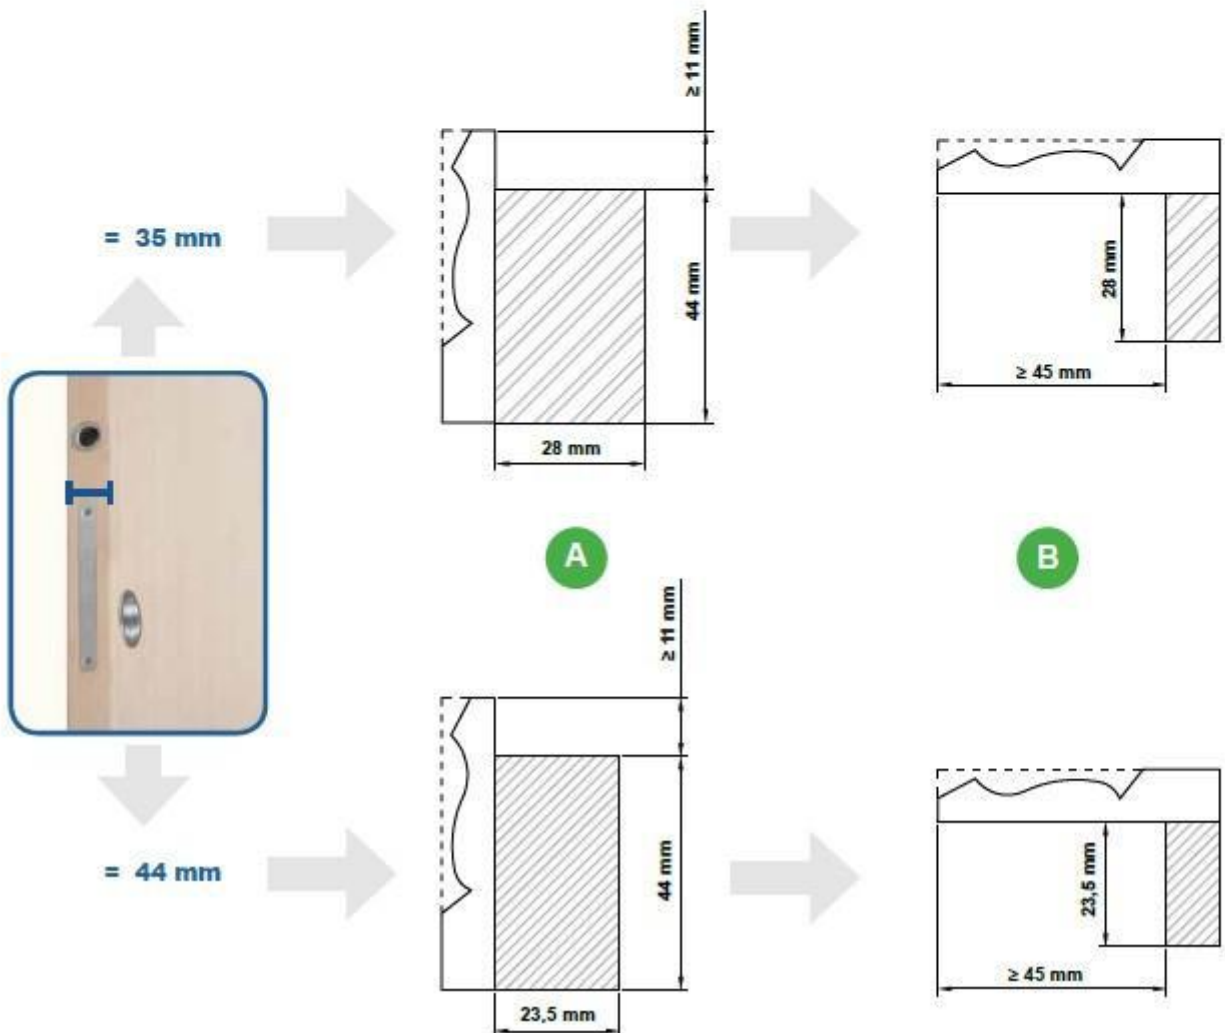


SINGLE DOOR


DOUBLE DOOR

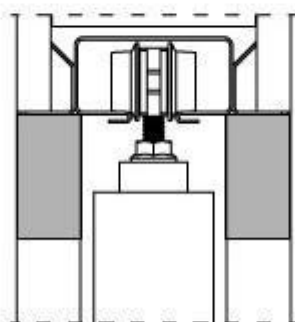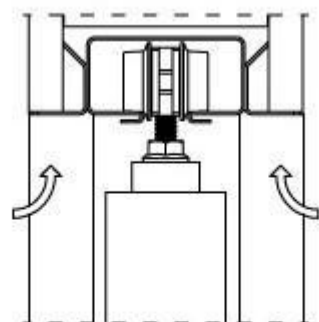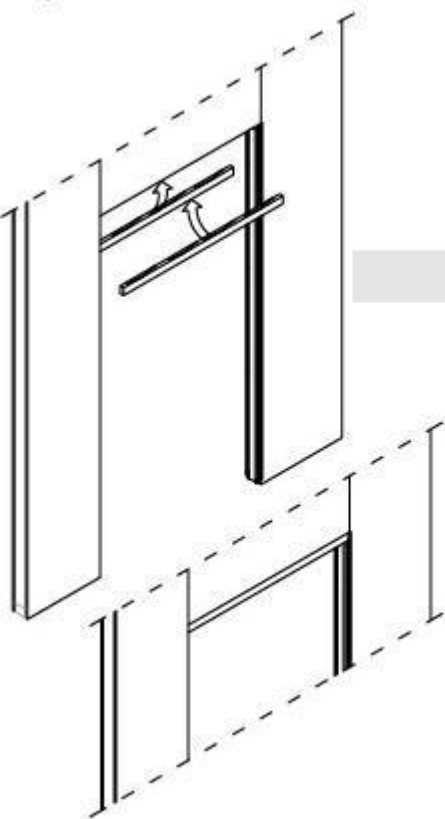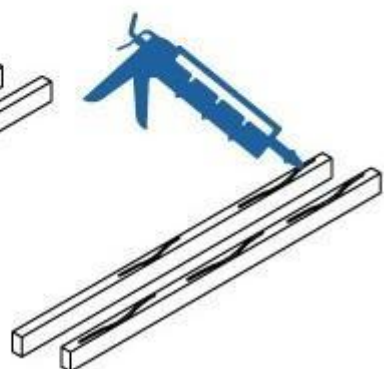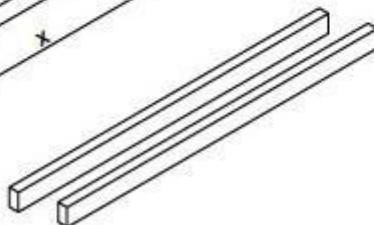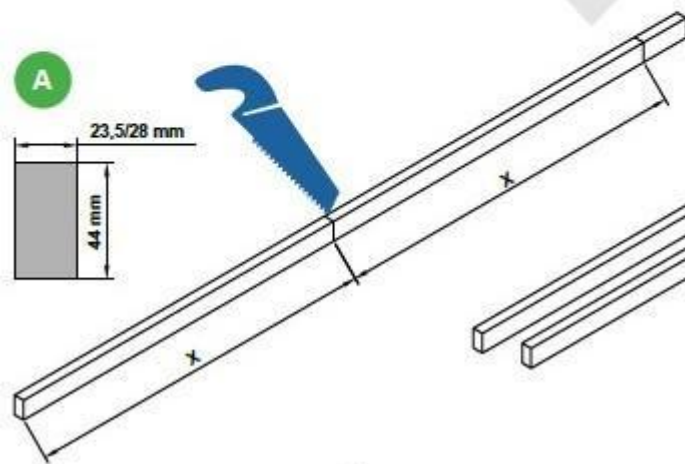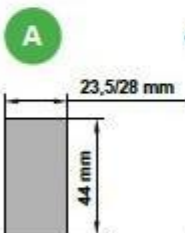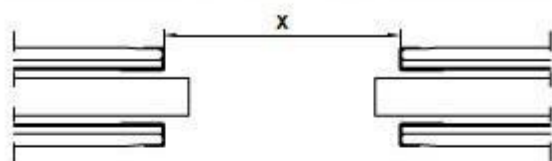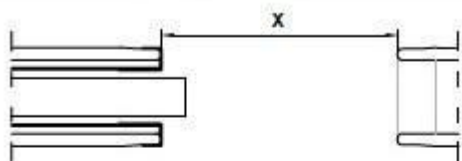

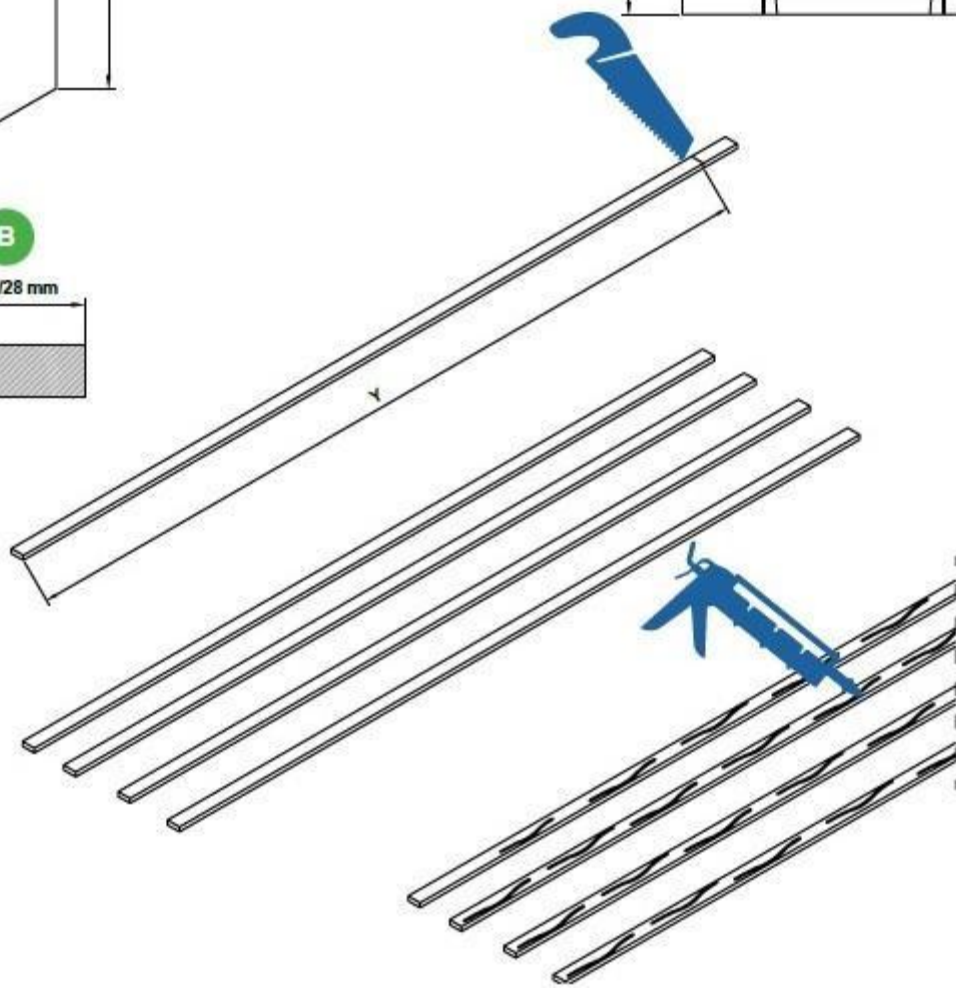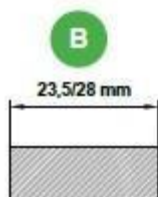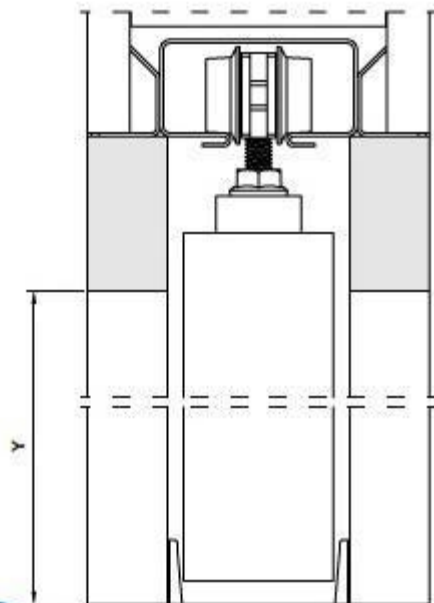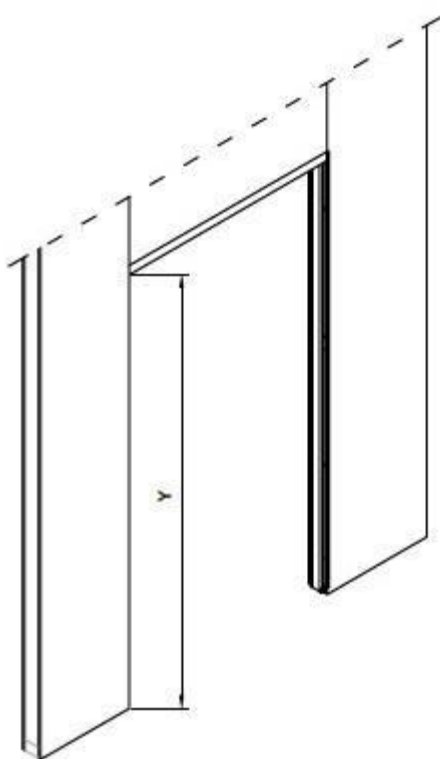


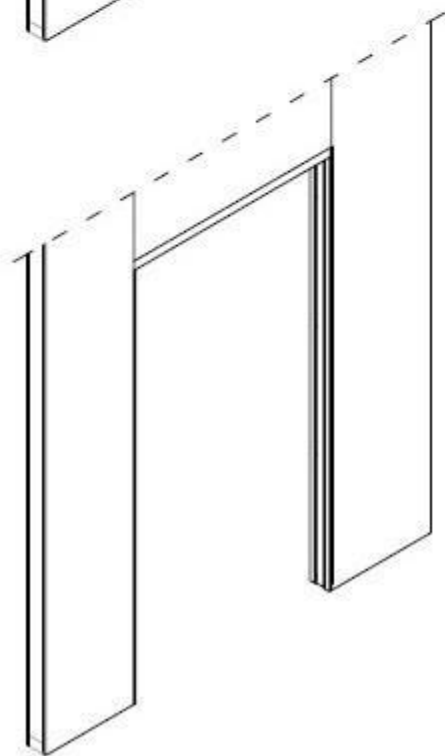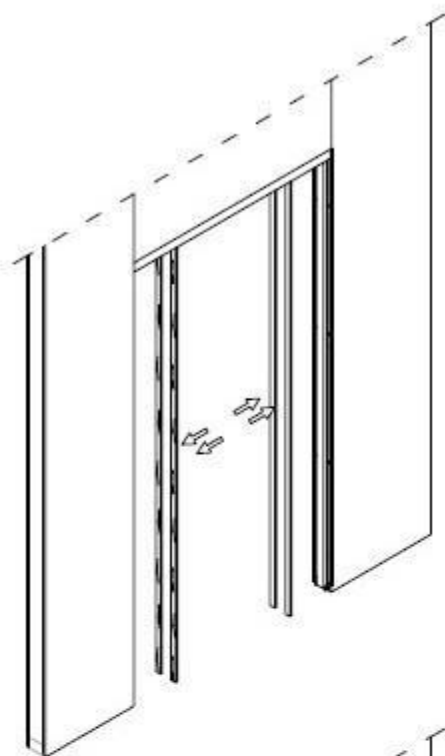


SINGLE DOOR

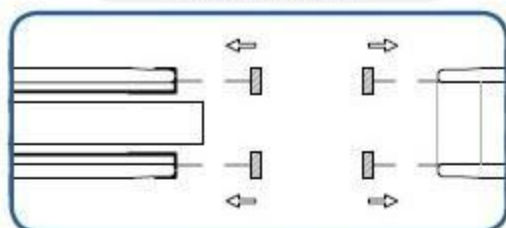

DOUBLE DOOR

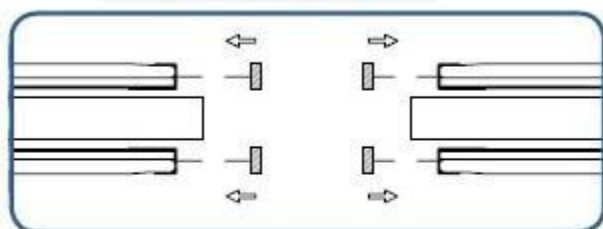

SINGLE DOOR

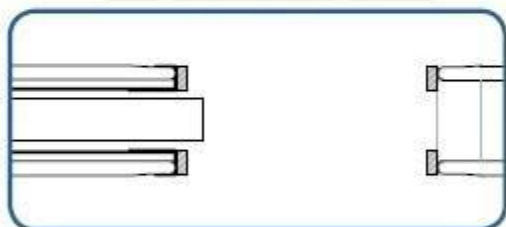

DOUBLE DOOR

