

- Install at finished floor level.
- To obtain a sliding pocket door with two leafs it's necessary to join n°2 single door kits.
- See page 4 for stud dimensions

DOOR PANEL		FRAME WIDTH	OVERALL DIMENSIONS				
			SINGLE DOOR		DOUBLE DOOR		
DW	DH		W	Н	W	Н	
610 686 762 838 914 626 726 826 926 1026 711 813 864	1981 1981 1981 1981 1981 2040 2040 2040 2040 2040 1981 2032 2032	90	1233 1385 1537 1689 1841 1264 1464 1664 1864 2064 1434 1638	2053 2053 2053 2053 2053 2112 2112 2112 2112 2112 2053 2104 2104	2466 2770 3074 3378 3682 2528 2928 3328 3728 4128 2868 3276 3480	2053 2053 2053 2053 2053 2112 2112 2112 2112 2112 2053 2104 2104	
Door Thickness: 35 - 44 mm							



Please follow the instructions carefully as they have been designed to help you, don't skip any pages or stages as you may cause yourself problems. Use the correct tools and relevant protective clothing/eyeware, gloves are essential as there may be some sharp edges. A pair of trestles would be useful for the assembly.

WANT TO SEE HOW IT'S DONE?




GO TO WWW.ROCKETDOORFRAMES.CO.UK TO SEE THE INSTALLATION VIDEO


TOOLS REQUIRED




CONTENTSEACH KIT CONTAINS:

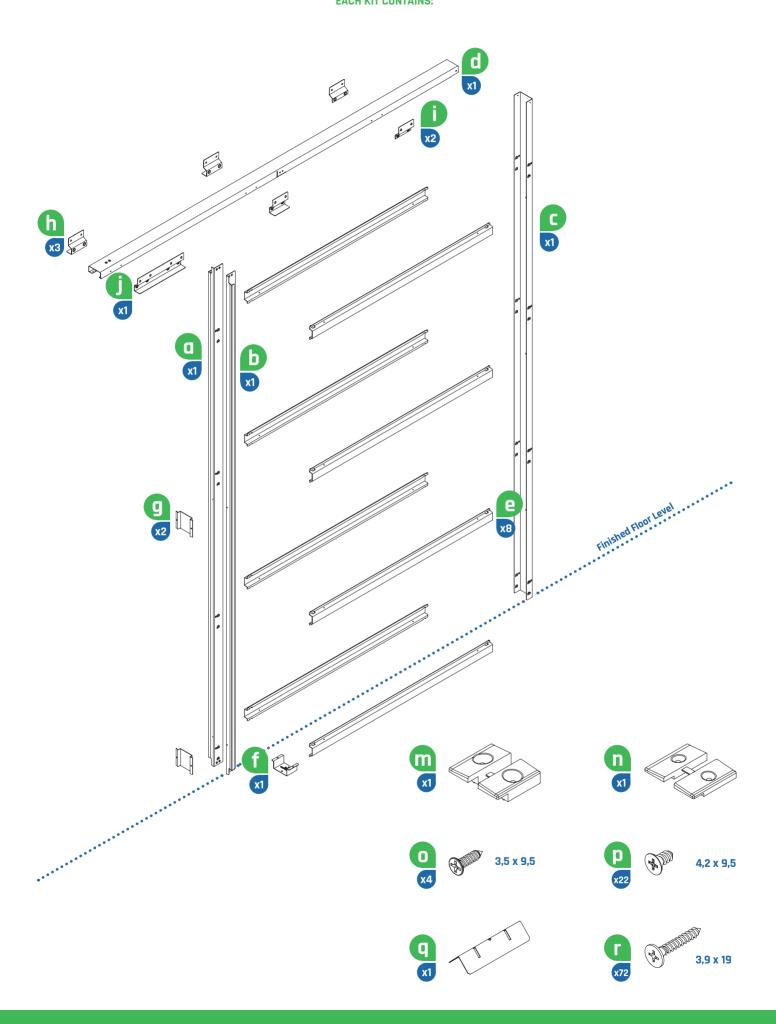


CONTENTSEACH KIT CONTAINS:

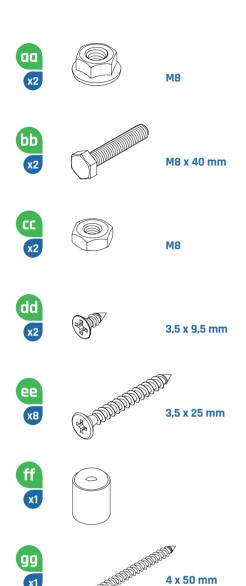

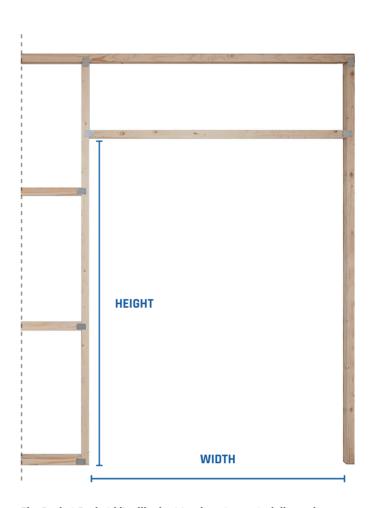


The Rocket Pocket kit will adapt to almost any stud dimension HOWEVER, the stud immediately above the frame must be 90 mm. You can add layers of plasterboard to this to then obtain the wall thickness you require. Bare in mind the jamb dimensions will change accordingly.

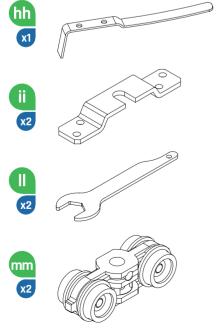


DOOR PANEL		OVERALL DIMENSIONS						
		SINGLE	DOOR	DOUBLE DOOR				
DW	DH	W	Н	W	Н			
610 686 762 838 914 626 726 826 926	1981 1981 1981 1981 1981 2040 2040 2040 2040	1233 1385 1537 1689 1841 1264 1464 1664 1864 2064	2053 2053 2053 2053 2053 2112 2112 2112 2112 2112	2466 2770 3074 3378 3682 2528 2928 3328 3728 4128	2053 2053 2053 2053 2053 2112 2112 2112 2112 2112			
711 813 864	1981 2032 2032	1434 1638 1740	2053 2104 2104	2868 3276 3480	2053 2104 2104			
Door Thickness: 35 - 44 mm								


CHOOSING THE DOOR GUIDE


FOR WOODEN DOORS ONLY

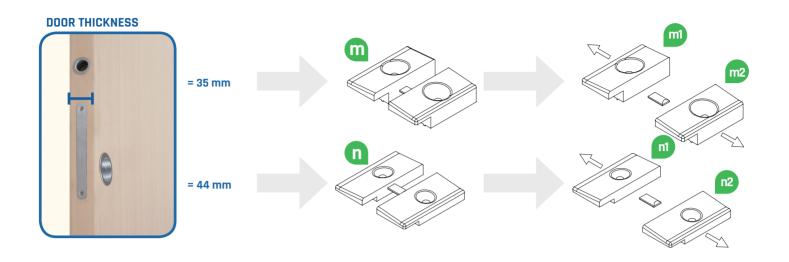


FOR EXAMPLE 35 mm THICK DOOR

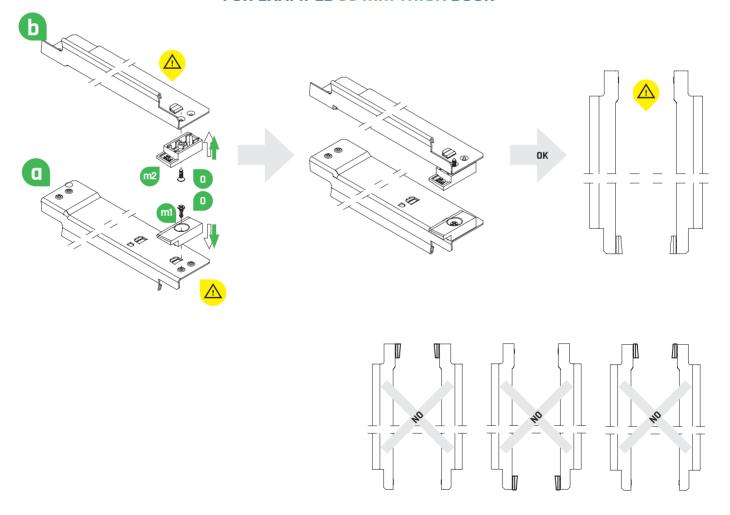


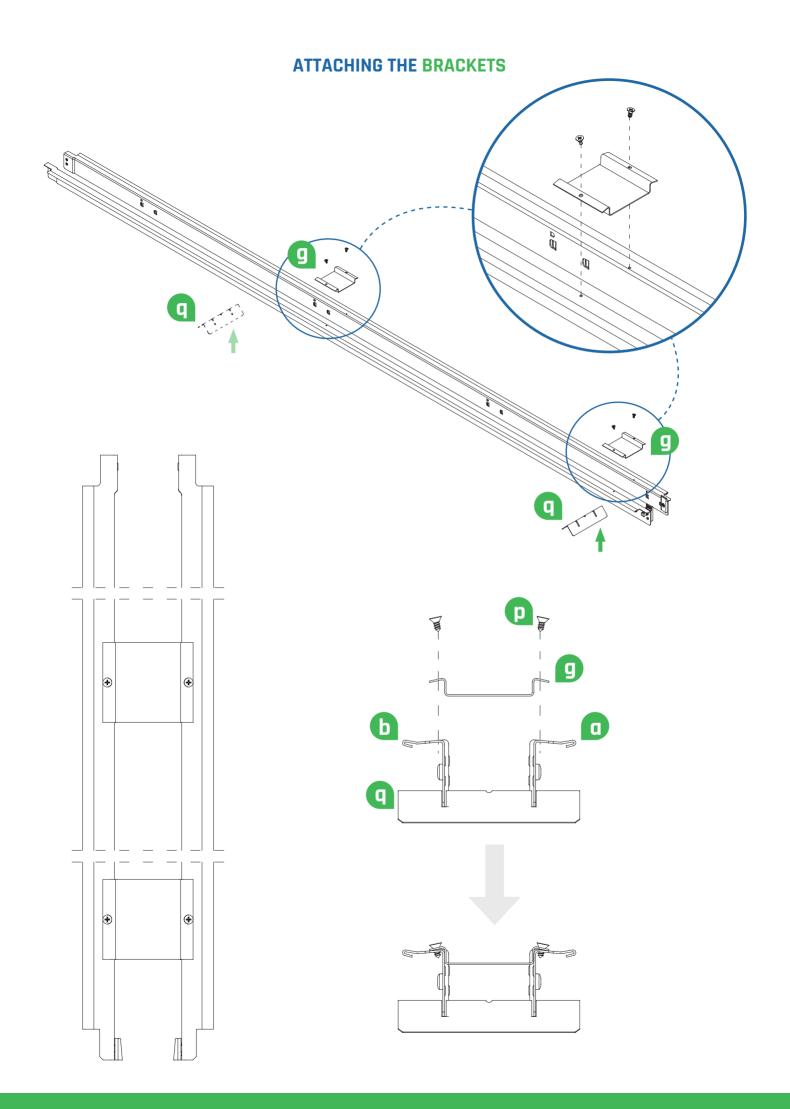

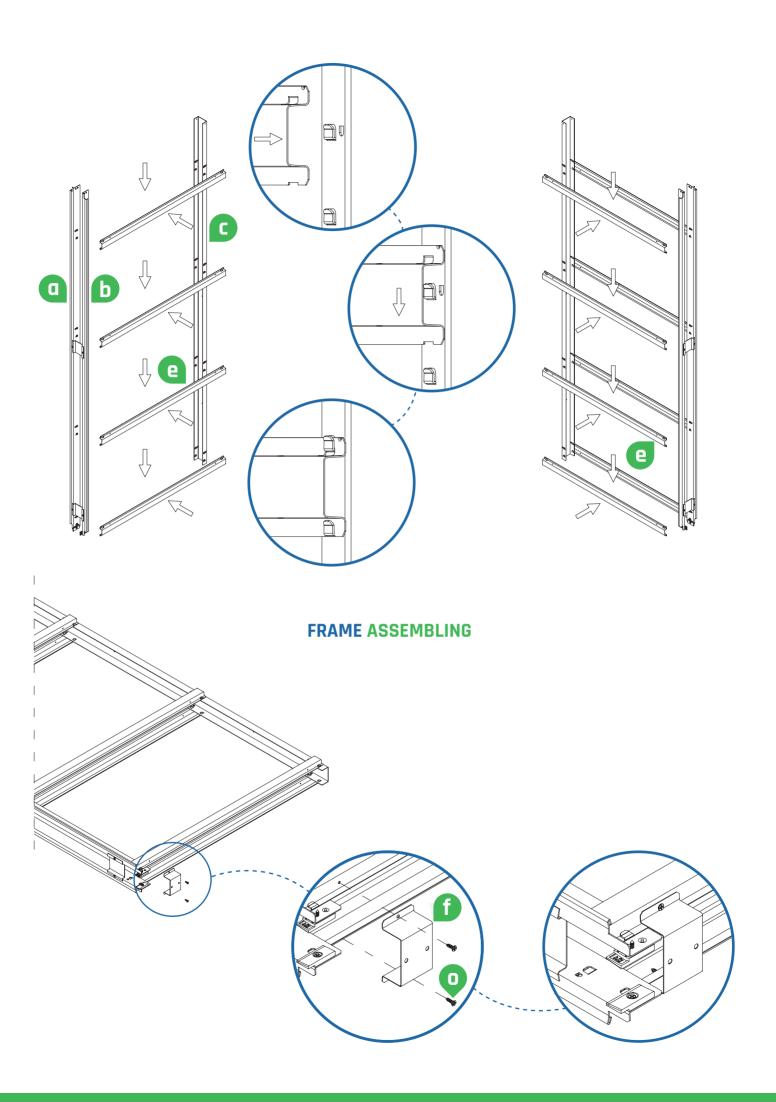


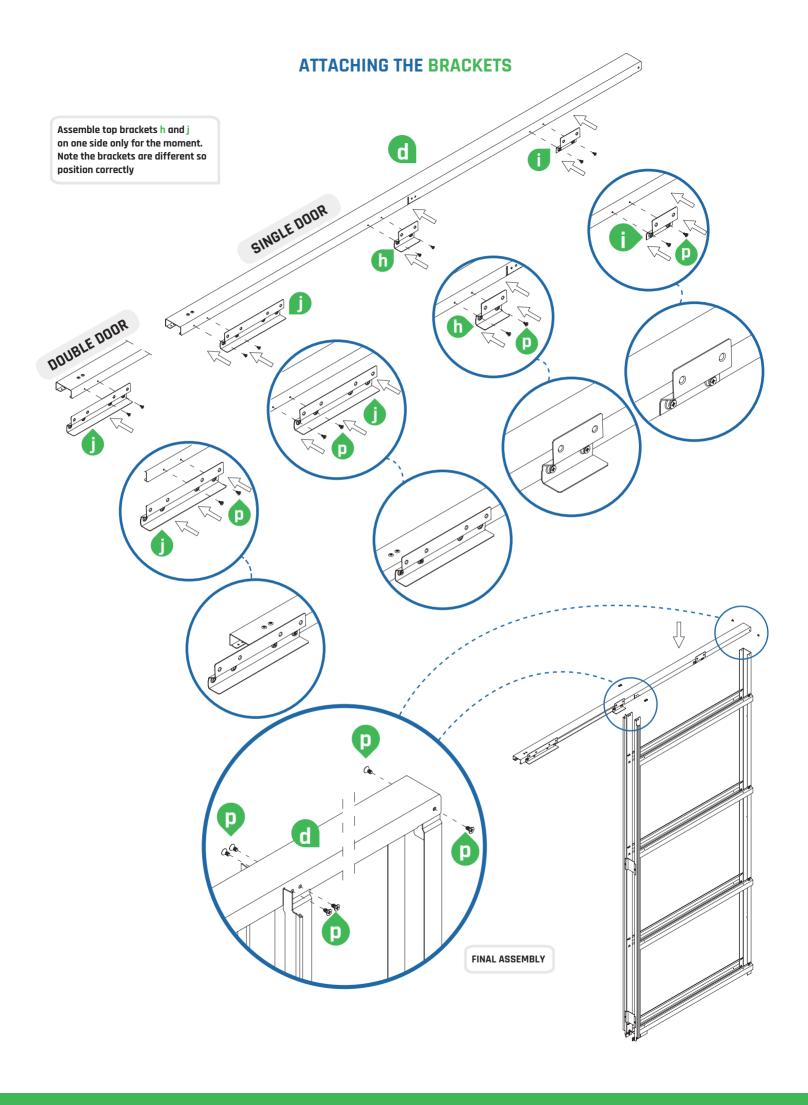


SINGLE DOOR

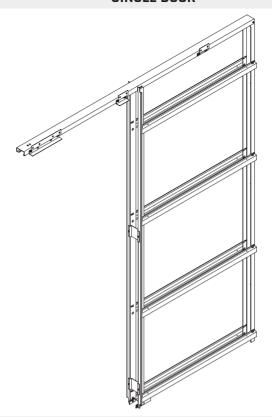



DOUBLE DOOR

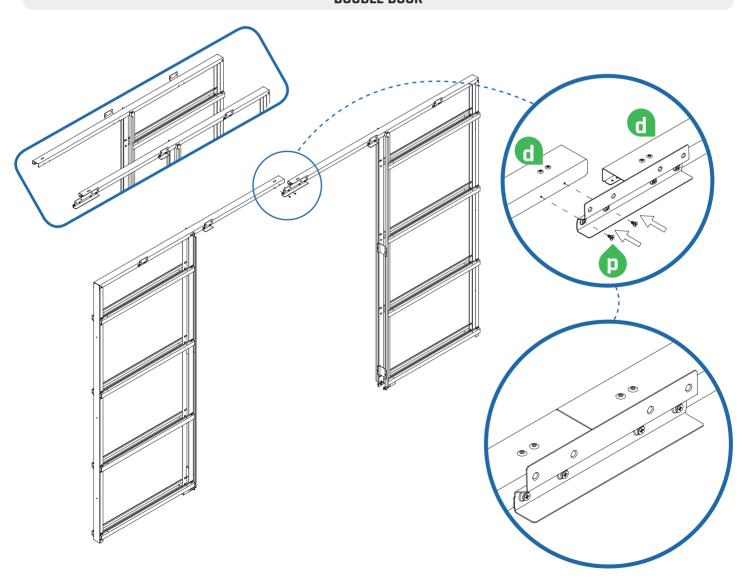


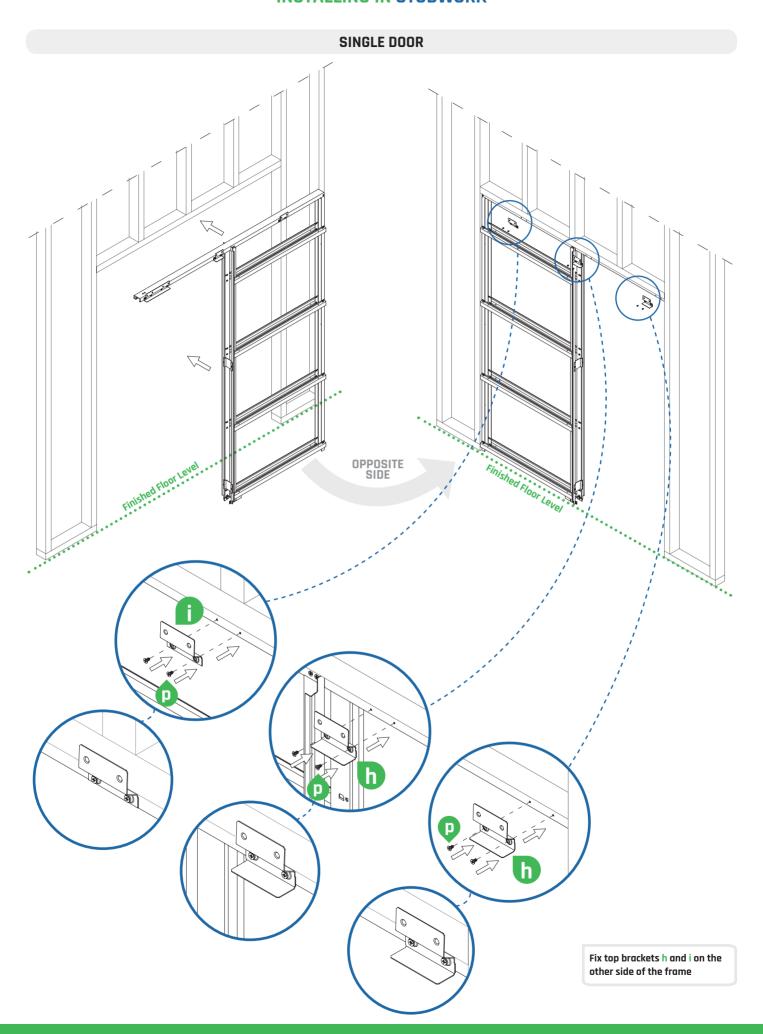



DOUBLE DOOR

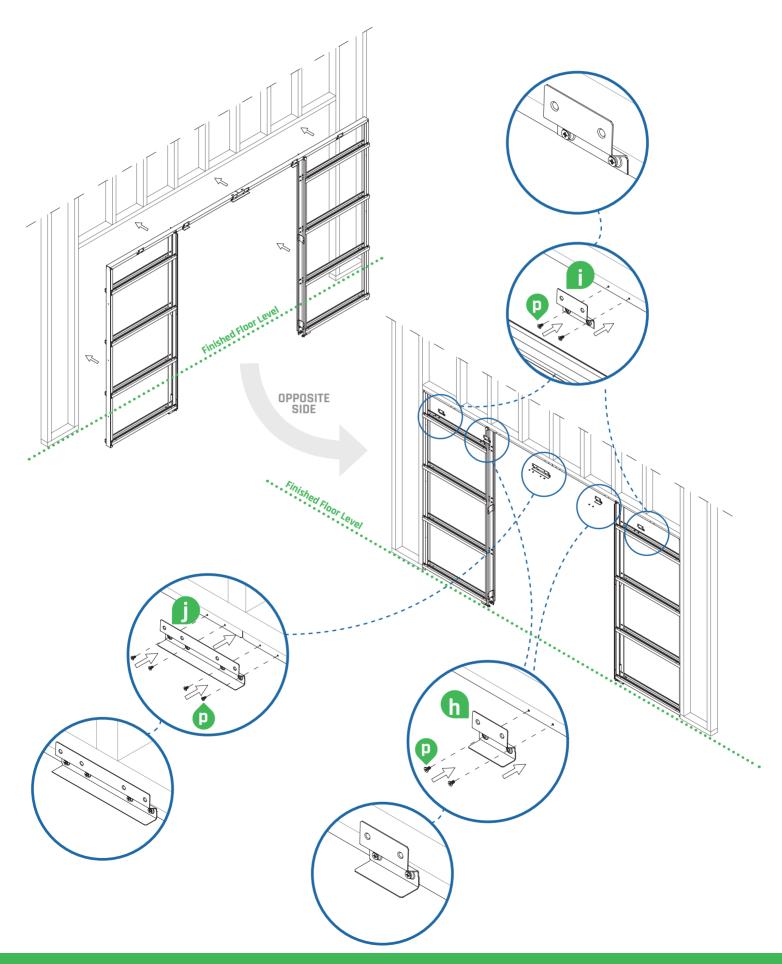

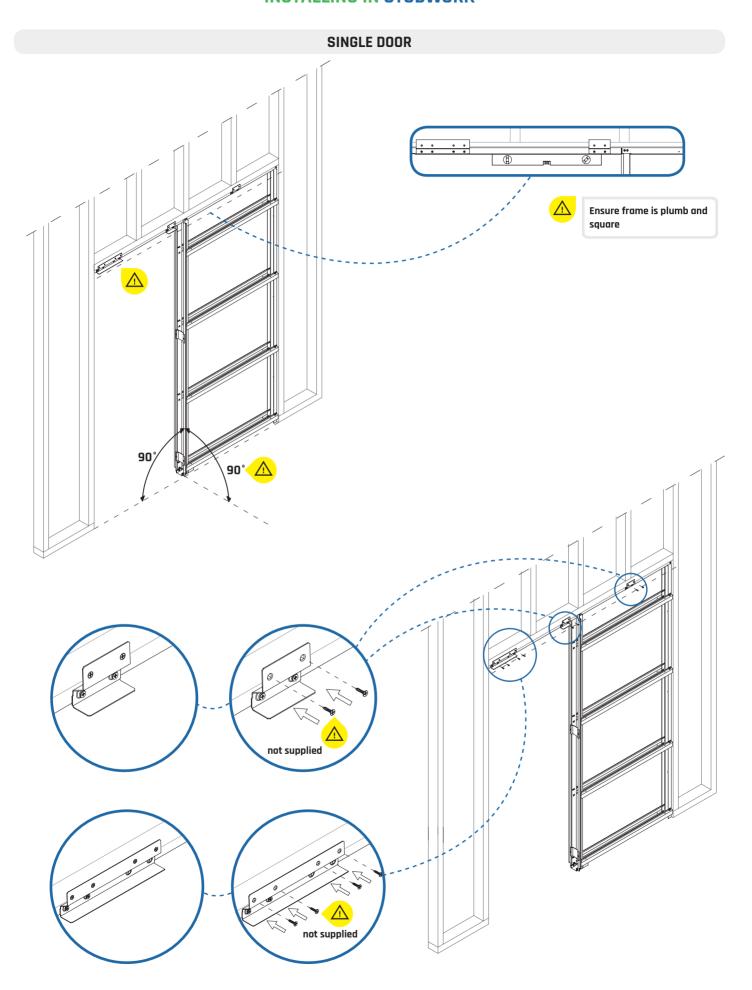


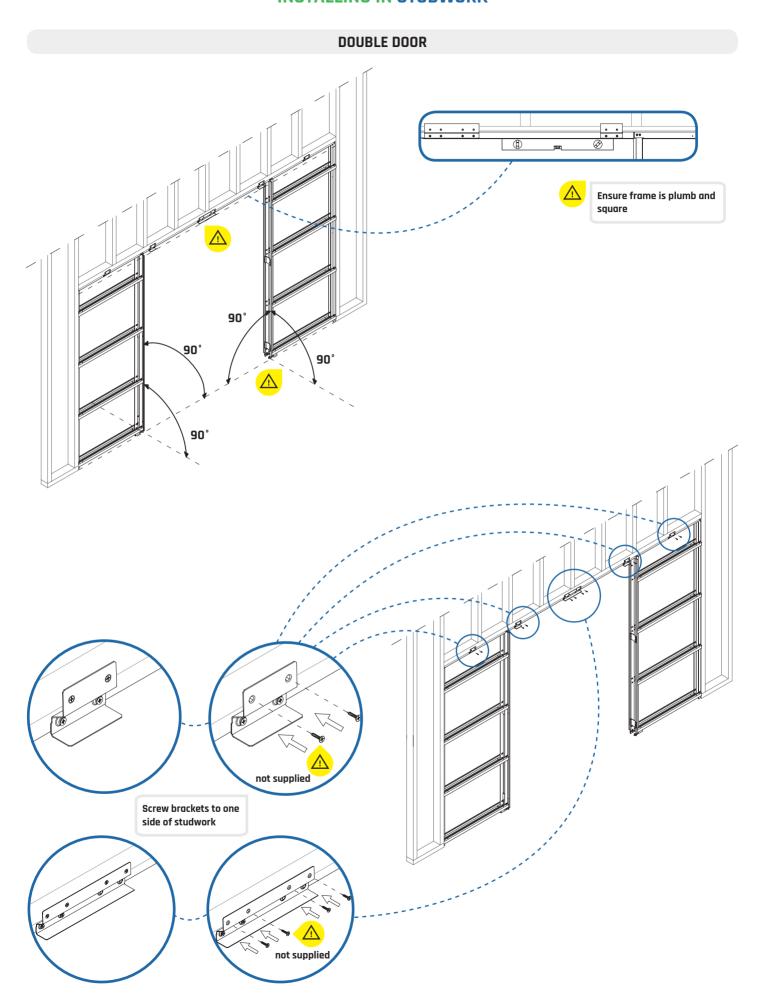

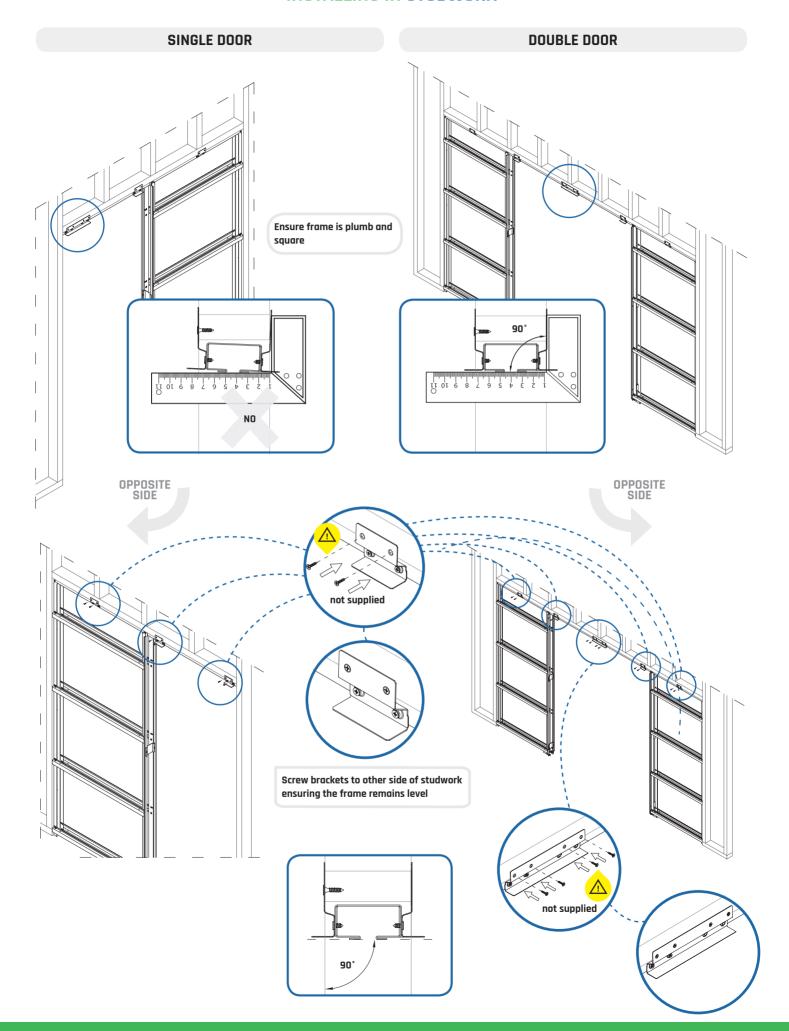


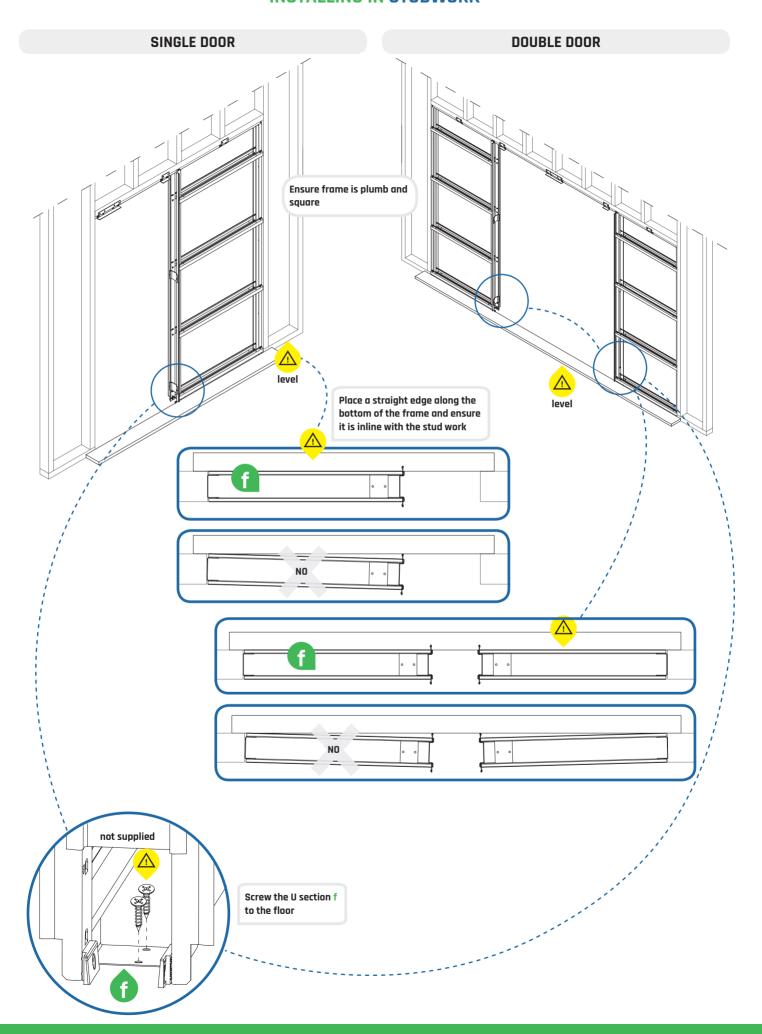

SCREWING THE REAR VERTICAL TO THE STUDWORK

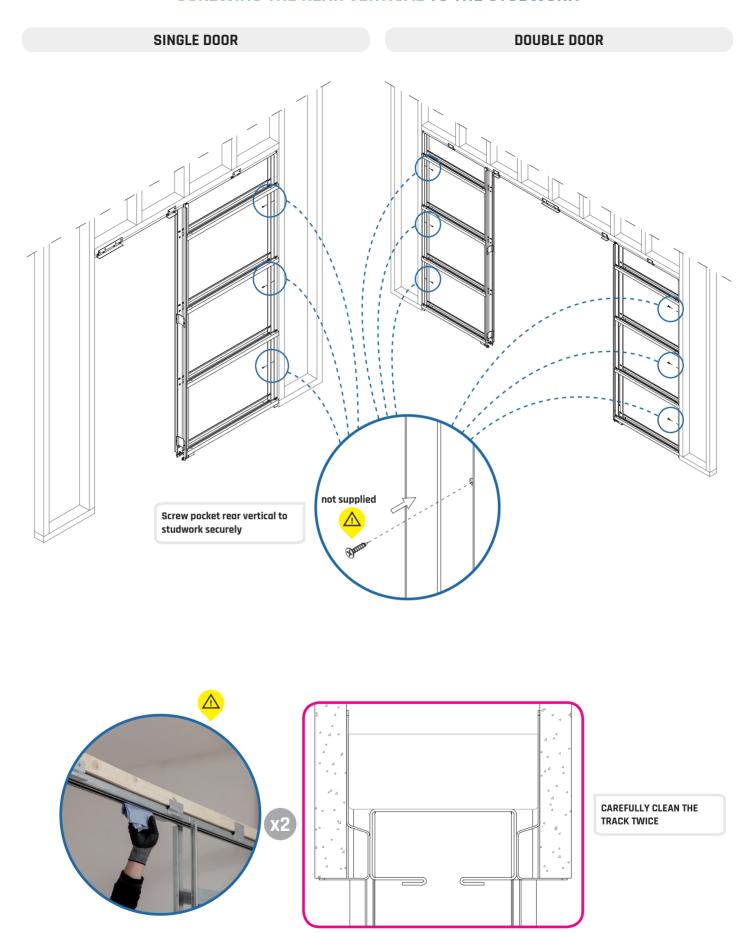


FIXING THE PLASTERBOARD

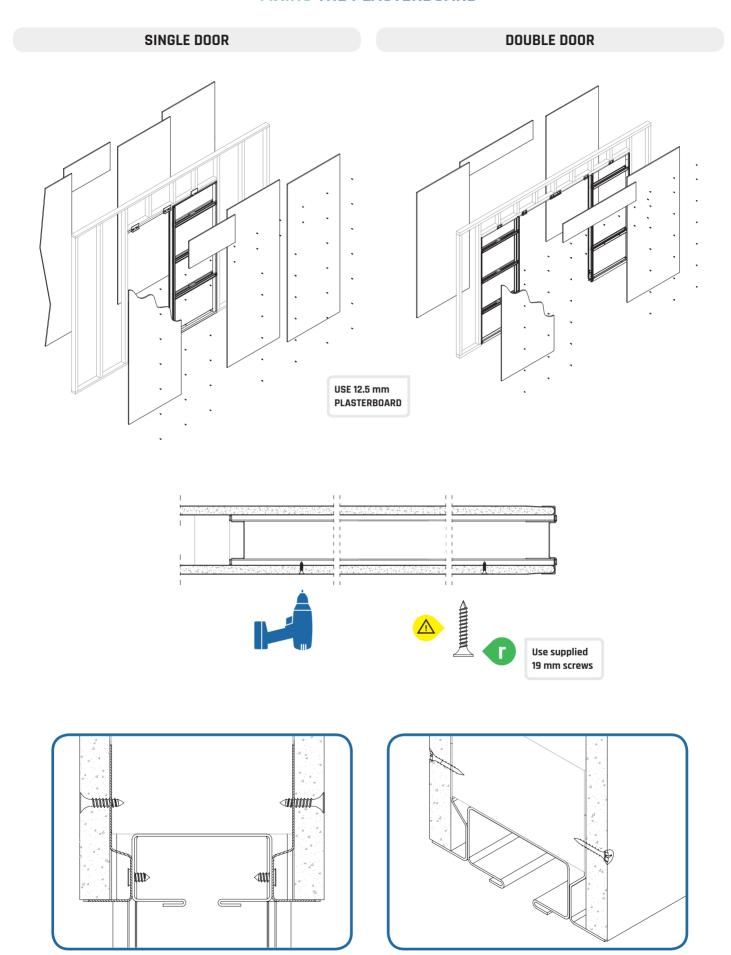


REMOVING BRACKETS


SINGLE DOOR DOUBLE DOOR

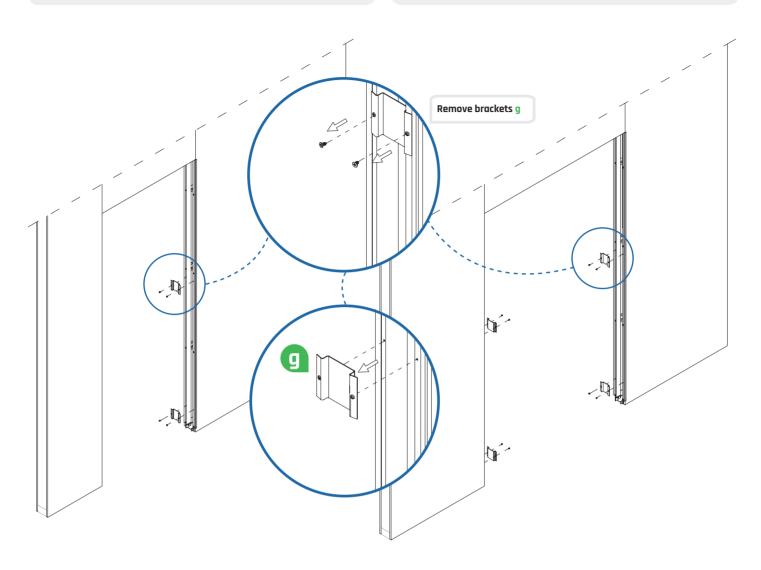


RUNNERS ASSEMBLING

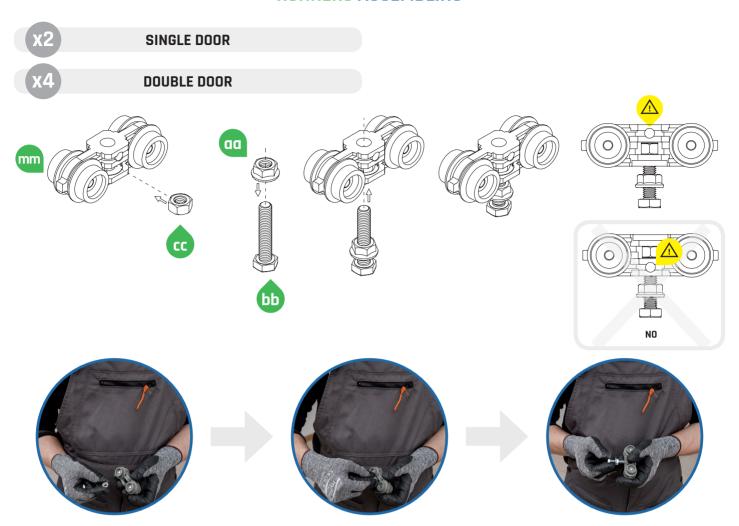


INSERT RUNNERS INTO TRACK

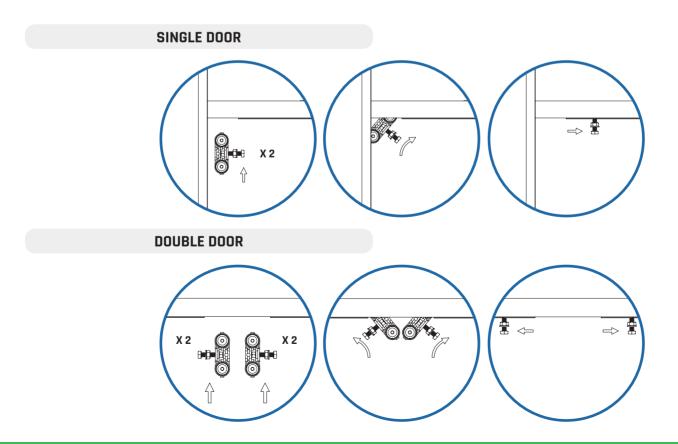


INSTALLING DOOR BRACKETS

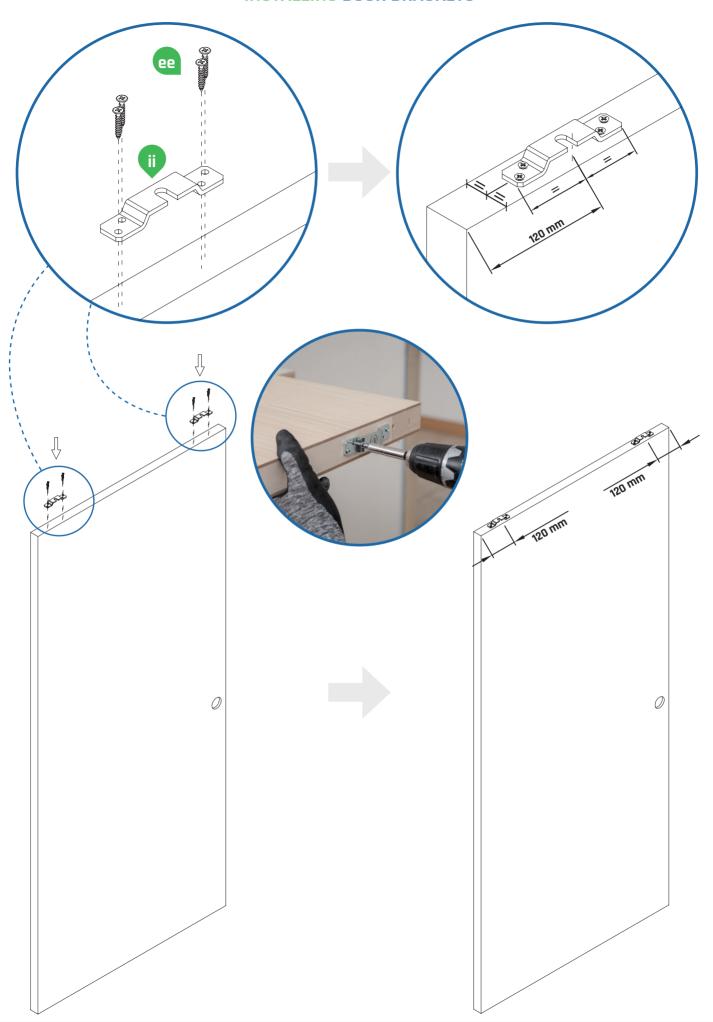

INSTALLING REAR DOOR BUMPER

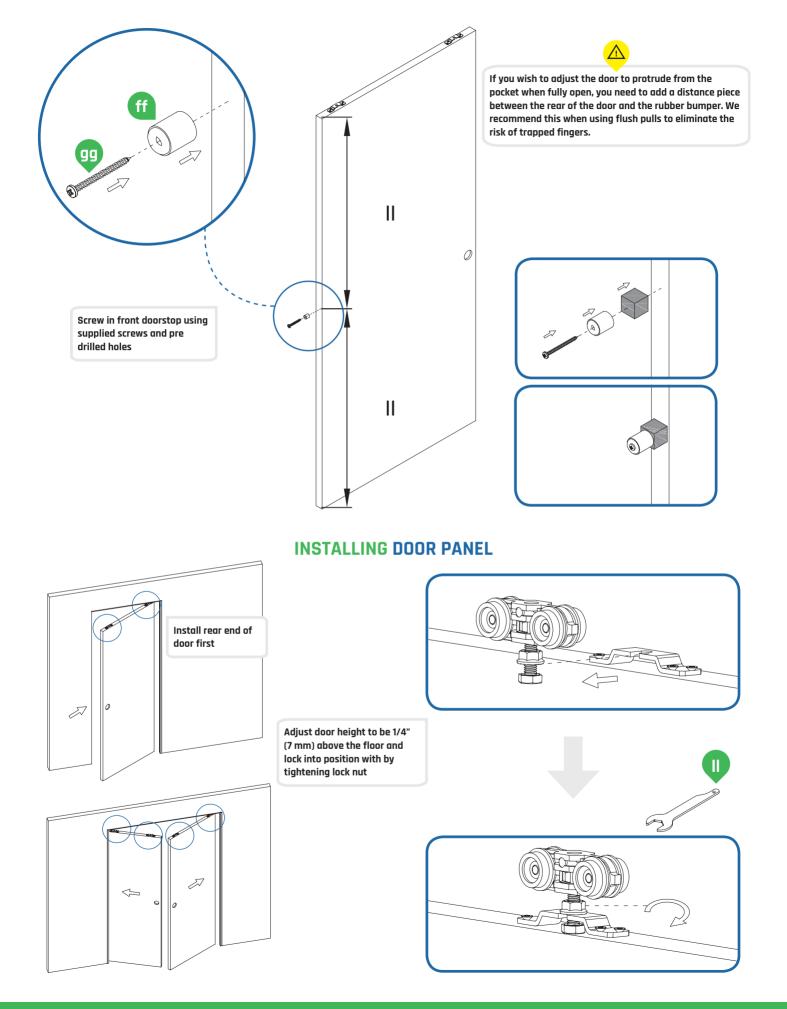

INSTALLING DOOR BRAKE

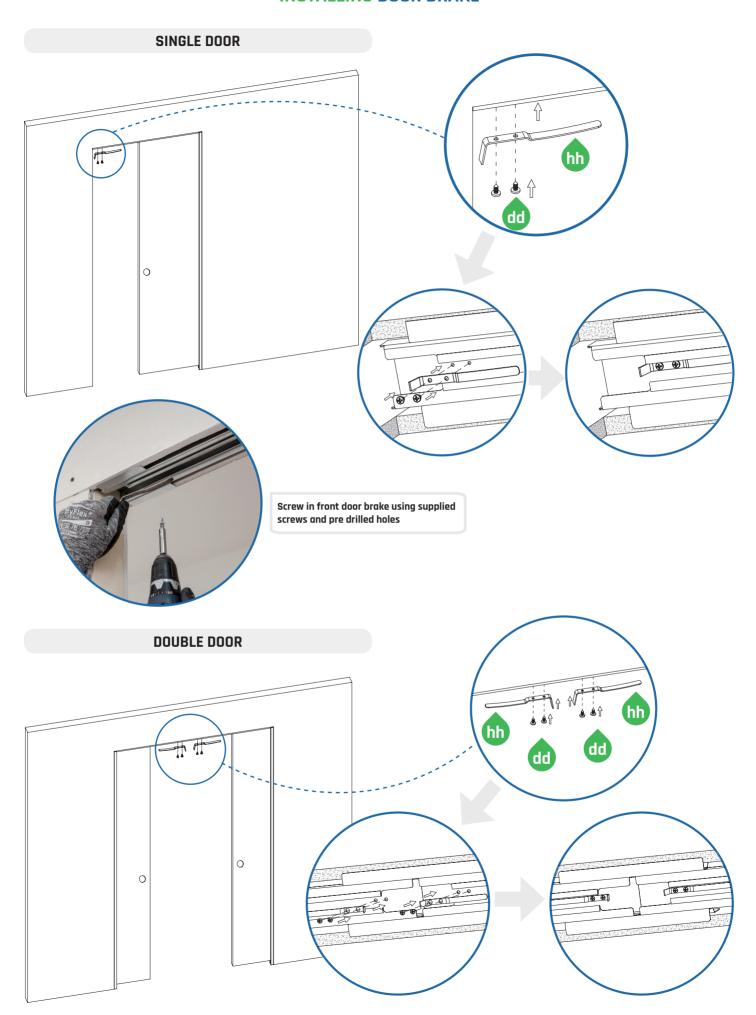



WANT TO SEE HOW IT'S DONE?



GO TO WWW.ROCKETDOORFRAMES.CO.UK TO SEE AN INSTALLATION VIDEO

