


ASSEMBLY AND INSTALLATION INSTRUCTIONS

All dimensions in millimetres



<p>Required space</p>	<p>Side wall drilling positions</p>
<p>Front: installation for flaps with standard aluminium frame profiles (19 mm)</p>	<p>Front: installation for wooden and frame flaps (min. 45 mm width)</p>
<p>Calculation of flap weight</p> <p>Flap width x flap height x flap thickness x density ¹ + weight of handle ² = weight of flap</p> <p>¹ Densities: MDF 0.85 kg/dm³, chipboard 0.65 kg/dm³, spruce/pine 0.45 kg/dm³</p> <p>² For bar handles, allow 0.1 kg for each 100 mm handle width. We recommend a trial fitting</p>	

WARNING

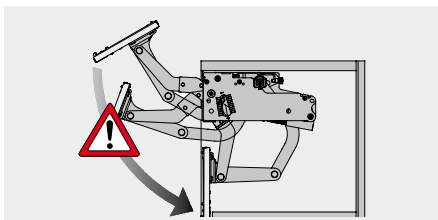

Important!
Caution – risk of injury!
Fitting is spring-tensioned!

LEGEND

FAO Front overlay, top
FAS Front overlay, side
LWK Inside cabinet width